

Clueless Organizer... The Electronic Diary for Ultra Hip Girls!

Contents

A Quick Look at the Clueless Organizer.....	p. 2
How to Change the Batteries Without Losing Your Stuff.....	p. 3-6
The Buttons You Will Use.....	p. 7-8
Features:	
Clock/Alarm.....	p. 9
Wassup?.....	p. 10
Calculator.....	p. 11-12
Way Cool Happenings.....	p. 13-14
Digit Lister.....	p. 14-15
Password.....	p. 16-17
Trendy Stuff.....	p. 18
Troubleshooting.....	p. 19
Cautions.....	p. 20
Warranty.....	p. 21-22

A Quick Look at the Clueless Organizer



This is the **WASSUP?** mode to keep your social schedule organized. You can save dated messages of fifteen characters each.



This is the **CALCULATOR**. You use the number keys, arrow buttons for functions, SPACE or AC for CLEAR and ENTER for the EQUAL SIGN.



This list is **WAY COOL HAPPENINGS**. You can save messages for an exact time and date.



This is the **DIGIT LISTER**. You can save the names, phone numbers and birthdays of the hotties in your life.



This is your **PASSWORD**. You can create a four character password to protect your files from nosy snoops.



This list is for other **TRENDY STUFF**. You can save one list that holds up to fifty characters.



This function lets you set the **CLOCK**, and/or **ALARM** and change them both.


How to Change the Batteries Without Losing Your Stuff

The Clueless Organizer has main batteries and a backup battery. The main batteries are two "AAA" batteries that must be installed before you can use your Clueless Organizer. The backup battery is a CR2032 "button cell" battery about the size of a nickel. It provides power to hold your information if the "AAA" batteries discharge completely.


NEVER REMOVE ALL OF THE BATTERIES OR ALL OF YOUR INFORMATION WILL BE ERASED!

Replacing the Main Batteries


With your parents' help, open the battery compartment door using a Phillips screwdriver.

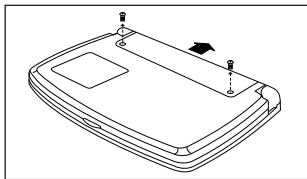


Slide open the cover to expose the "AAA" battery compartment.

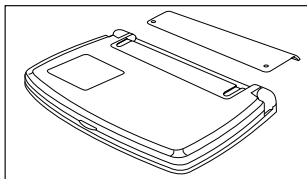


Load the batteries, making sure the +’s and -’s line up.

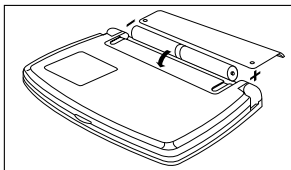


Slide the cover closed

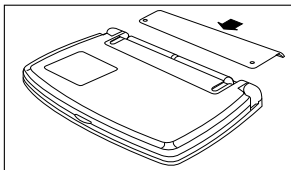

....and replace the screws to complete the installation.

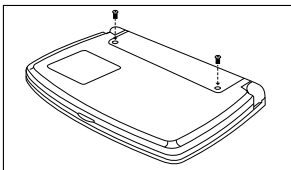

You **MUST** press RESET before initial use and after replacing batteries.

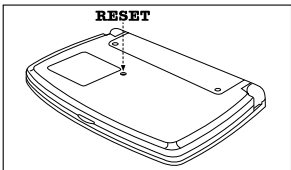

TO ENSURE PROPER FUNCTION :

DO NOT MIX OLD AND NEW BATTERIES

DO NOT MIX ALKALINE, STANDARD OR RECHARGEABLE BATTERIES.

BATTERY INSTALLATION SHOULD BE DONE BY AN ADULT.

NON-RECHARGEABLE BATTERIES ARE NOT TO BE RECHARGED.

RECHARGEABLE BATTERIES ARE TO BE REMOVED FROM THE TOY BEFORE BEING CHARGED (IF REMOVABLE).

RECHARGEABLE BATTERIES ARE ONLY TO BE CHARGED UNDER ADULT SUPERVISION (IF REMOVABLE).

ONLY BATTERIES OF THE SAME OR EQUIVALENT TYPE AS RECOMMENDED ARE TO BE USED.

BATTERIES ARE TO BE INSERTED WITH THE CORRECT POLARITY.

EXHAUSTED BATTERIES ARE TO BE REMOVED FROM THE TOY.


THE SUPPLY TERMINALS ARE NOT TO BE SHORT-CIRCUITED.

DO NOT GIVE THE TOOLS TO CHILDREN FOR OPENING THE BATTERY DOOR.


Replacing the Backup Battery

Note: This battery was installed at the factory and should not need changing for 24 months after you begin using the Clueless Organizer under normal use.


Remove the screw holding the small cover plate.

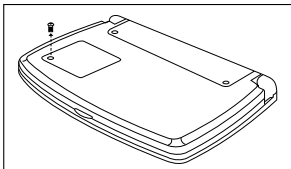


With an adult's help, remove the CR2032 button cell battery and replace it with one of the same type (available in most mass merchant stores.) Make sure that its positive(+) side is facing up.

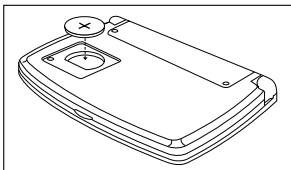

Replace the cover plate and screw.

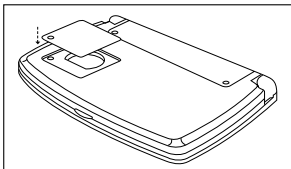

The Buttons You Will Use

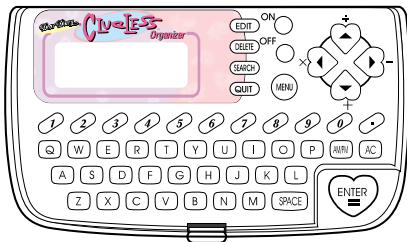

Press **EDIT** when you want to change the information in your Clueless Organizer being shown on the display. You can then add or remove information using the keyboard.

Press **DELETE** when you want to erase a character at the underline cursor or erase an item from Wassup?, Way Cool Happenings, Digit Lister or Trendy Stuff.

Press **SEARCH** when you have a list in the Clueless Organizer you want to look through. If you press a **letter followed by SEARCH** you will see the first word that begins with that letter. (Very useful for finding Josh's number in the telephone directory.) If you press **SEARCH** in the **WAY COOL HAPPENINGS** mode, you will see your list in chronological order.

Press **QUIT** to stop editing or reading the current list and back up one level closer to the main menu.

Press **MENU** to jump right to the main selection menu.

Press the **UP**, **DOWN**, **LEFT** and **RIGHT ARROWS** to make the calculator divide, add, multiply and subtract. The label shows the function matched with each button.

Press **AC** to clear the display and memory in the calculator.

Press **ENTER** to make a selection when the Clueless Organizer asks you to. In the calculator, use **ENTER** for the equal sign(=).

Press the **ON** key to access the **CLOCK/ALARM** feature. Press **ENTER** and the entire menu is shown.

Press the **OFF** key to turn off menu icons.


Note: The clock, day and date will always remain on the screen for quick reference.

Reset Operation:

- By pressing the **RESET** button, you can delete all the data previously entered. A message on screen will ask you, **CLEARALL?Y/N**.

By pressing **Y**(yes) all data will be deleted, **N**(no) will return you to the clock display screen.

- **Be sure to press the **RESET** button before you use the Clueless Organizer for the first time and after replacing batteries.**

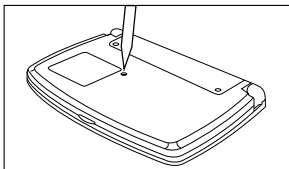

Clock/Alarm



 
Press **MENU** to see symbols for the seven functions.

Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the far right symbol, Clock/Alarm.


Press **EDIT**, the screen will show CLOCK/ALARM. Press "C" for Clock.




Enter the Date using keys 0-9. Use two digits for the month, two digits for the day and the last two digits of the year. Press **ENTER** when date is correct.



 Enter the Time using keys 0-9. Use two digits for the hour and two digits for the minute. Press **AM/PM** to activate AM or PM mode. Press **ENTER** when time is correct.




 To access the ALARM function, go back to the screen that shows CLOCK/ALARM and press A for ALARM.



Enter the Alarm Time using keys 0-9. Press **ENTER** when ALARM is correct. Press AM/PM to activate AM or PM mode.

 To activate the ALARM, select ON/OFF using the arrows keys. Press **ENTER** to save the ALARM.



Press **QUIT** or **MENU** to return to the Main Screen.

Note: When alarm rings on the time you select, press any key to turn it off.

 
Wassup?

Press **MENU** to see symbols for the seven functions.




Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the far left symbol, WASSUP?.


Enter the Date to Remember using keys 0-9. Press **ENTER** when date is correct.



 Enter the message to remember using the keypad. Press **ENTER** when the message is correct.



 Continue entering your list. To look at your list, press the **DOWN ARROW**. The first message and date will appear.



Press the **DOWN ARROW** to view/recall your list. The list will automatically sort by placing the earliest date first.

Press **QUIT** or **MENU** to return to the Main Screen.

Calculator




Press **MENU** to see symbols for the seven functions.



Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the second symbol, **CALCULATOR**.



Use the number keys and function keys to enter your problem.

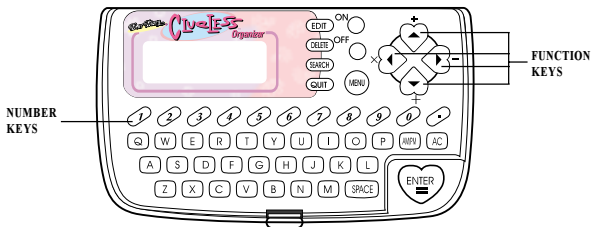

Use **ENTER** as the equal sign(=).

Use **SPACE** or **AC** to clear the memory.

FOR EXAMPLE :

$600 \div 25 =$ (divide is up arrow) (= is ENTER)

Display shows : 24 (the correct result)

Next example : clear memory (clear is AC or SPACE)

$13 + 11 =$ (plus is down arrow) (= is ENTER)

Display shows : 24 (the correct result)

Continuing the example with the last result:

$\times 25 =$ (multiply is left arrow) (= is ENTER)

Display shows : 600 (the correct result)

Press **QUIT** or **MENU** to return to the Main Screen.

Way Cool Happenings

 
Press **MENU** to see symbols for the seven functions. Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the third symbol, WAY COOL HAPPENINGS.



Enter the Date to Remember using keys 0-9. Press **ENTER** when the date is correct.



Enter the Time to Remember. Press **ENTER** when the time is correct.



Press **AM/PM** to activate AM or PM mode.

Enter the message you need to remember.



To look at your list, press **SEARCH**. The first date and time will appear.



Press the **DOWN ARROW** to see your message... and again to see other messages.



Press **DELETE** to erase the message showing on the display.

Press **QUIT** or **MENU** to return to the Main Screen.

Digit Lister

Press **MENU** to see symbols for the seven functions. Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the fourth symbol, **DIGIT LISTER**.



Enter the Name of the first person on your list. Press **ENTER** when the name is correct. The Clueless Organizer will then alphabetize them.



Enter the the person's telephone number using keys 0-9, " - " and space. Press **ENTER** when the number is correct.



Enter the person's birthday using keys 0-9. Press **ENTER** when the birthday is correct.



Press **SEARCH** to scroll through your list. The first person will be displayed.



Then press the **DOWN ARROW** once to see the first person's birthday, and again to scroll through your list in alphabetical order.



A faster way to find a number is to press the first letter (or letters) in the name followed by **SEARCH**.



 
Press **QUIT** or **MENU** to return to the Main Screen.

Password

Press **MENU** to see symbols for the seven functions. Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the fifth symbol, **PASSWORD**.





Enter the four characters that you want to be your password. Press **ENTER** when your password is correct.



The Clueless Organizer will ask you to enter your password again to make sure it is the correct one. Press **ENTER** when your password is correct the second time.

  (ACTUAL PASSWORD
WILL NOT APPEAR ON
SCREEN)



Select whether you want your password on (active) or off (inactive)... or if you want to edit it. Use the **LEFT/RIGHT ARROW** keys to blink your choice and press **ENTER** to accept it.

ON/OFF/EDIT

Your password will protect your privacy, preventing other people from scrolling through your Clueless Organizer.

NOTE: DON'T FORGET YOUR PASSWORD. IF YOU DO, YOU WILL NOT BE ABLE TO ACCESS ANY OF YOUR FILES (YOU MAY WANT TO WRITE IT DOWN IN A SPECIAL PLACE).

Press **QUIT** or **MENU** to return to the Main Screen.

Trendy Stuff



Press **MENU** to see symbols for the seven functions.

SELECT



 
 
Use the **LEFT** or **RIGHT ARROW** followed by **ENTER** to select the sixth symbol, **TRENDY STUFF**.

STUFF



This file has room for fifty (50) characters on one continuous line. Type as much stuff as you can in fifty characters. Use abbreviations. Press ENTER when you are finished.

To see your TRENDY STUFF list, press the **DOWN ARROW** key. Then, press the **RIGHT ARROW** key to scroll through the line. Press the **LEFT ARROW** key to scroll back.



Press **QUIT** or **MENU** to return to the Main Screen.

Troubleshooting

SYMPTOM

SOLUTION

Unit will not function after initial battery insertion.

RESET button on the back of the unit MUST be pressed before using for the first time.

Unit freezes or will not turn off.

Press the RESET button on the back of unit.

The screen becomes dim, cursor movement slows or functions do not work consistently.

"AAA" Batteries require replacement. Under normal use, "AAA" batteries may need replacement every 2-3 weeks. The back up button cell battery should last at least 2 years.

Cautions

High temperature will destroy the unit. Do not leave unit in direct sunlight.

Do not press the liquid crystal display and avoid heavy shock or the display may fail.

Replace batteries when the screen becomes dim.

Do not use a pencil or pin to press the reset button. Use a ball-point pen.

Clean only with a piece of soft dry cloth.

Do not mix old and new batteries.

Do not mix alkaline, standard or rechargeable batteries.

Defects or Damage

If a part of your game is damaged or something has been left out, DO NOT RETURN THE GAME TO THE STORE. The store doesn't have replacement parts. Instead, write to us at:

**TIGER ELECTRONICS, INC. REPAIR DEPT.
980 Woodlands Parkway,
Vernon Hills, Illinois 60061, U.S.A.**

In your note, mention the name of your game, the game's model number, and tell us briefly what the problem is. Also, include sales slip, date, place of purchase, price paid, and your return address. We will do our best to help.

90-DAY LIMITED WARRANTY

Tiger Electronics, Inc. (Tiger) warrants to the original consumer purchaser of this product that the product will be free from defects in materials or workmanship for 90 days from the date of original purchase. This warranty does not cover damages resulting from accident, negligence, improper service or use or other causes not arising out of defects in materials or workmanship.

During this 90-day warranty period, the product will either be repaired or replaced (at Tiger's option) without charge to the purchaser, when returned with proof of the date of purchase to either the dealer or to Tiger.

Product returned to Tiger without proof of the date of purchase or after the 90-day warranty period has expired, but prior to one year from the original date of purchase, will be repaired or replaced (at Tiger's option) for a service fee of U.S.\$11.00. Payments must be by check or money order payable to Tiger Electronics, Inc.

The foregoing states the purchaser's sole and exclusive remedy for any breach of warranty with respect to the product.

All product returned must be shipped prepaid and insured for loss or damage to:

**Tiger Electronics, Inc. Repair Dept.
980 Woodlands Parkway
Vernon Hills, Illinois 60061 U.S.A.**

The product should be carefully packed in the original box or other packing materials sufficient to avoid damage during shipment. Include a complete written description of the defect, a check if product is beyond the 90-day warranty period, and your printed name, address and telephone number.

THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES AND NO OTHER REPRESENTATIONS OR CLAIMS OF ANY NATURE SHALL BE BINDING ON OR OBLIGATE TIGER IN ANY WAY. ANY IMPLIED WARRANTIES APPLICABLE TO THIS PRODUCT, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE NINETY (90) DAY PERIOD DESCRIBED ABOVE. IN NO EVENT WILL TIGER BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES RESULTING FROM POSSESSION, USE, OR MALFUNCTION OF THIS TIGER PRODUCT.

Some states do not allow limitations as to how long an implied warranty lasts and/or exclusions or limitations of incidental or consequential damages, so the above limitations and/or exclusions of liability may not apply to you. This warranty gives you specific rights, and you may also have other rights which vary from state to state.

NOTES

NOTES

Dear Diary...

CIVILESS™

Organizer



Model: 71-533

INSTRUCTIONS



TIGER **ELECTRONICS**
INC.®

Product Design © 1997 Tiger Electronics, Inc.
980 Woodlands Parkway, Vernon Hills, Illinois 60061

Tiger Electronics (UK) Ltd.
Belvedere House, Victoria Avenue
Harrogate, North Yorkshire HG1 1EL, England.

Clueless TM & © 1997 Paramount Pictures. All Rights Reserved.
Tiger Electronics, Inc. Authorized User.

PRINTED IN HONG HONG

7153301IWTI-1